

# MARDUK HOLLOWS BUS STOP



## BEFORE YOU BEGIN:

**PLEASE READ THROUGH THE INSTRUCTIONS AND INSPECT THE KIT BEFORE YOU GET STARTED.**

**Tools:** You may need basic hobby tools such as a hobby knife, files, and sandpaper as well as glue to complete the assembly process.

**Glue:** We recommend using both superglue and PVA (white glue). Super glue is necessary for gluing any plastic, acrylic, or resin parts and sets very quickly. PVA gives you more working time if you need it for larger areas or for parts that need extra finesse to get lined up perfectly.

**Cleaning Parts:** The sprue points where parts were attached to the sheets can be sanded flush or carefully saved with a hobby knife. We do not recommend scaping as you would with plastic or resin models as it tends to make the MDF fray and get fuzzy. Part cleaning with a hobby knife is easiest if done before assembly, but can frequently be done after if you have files and sandpaper on hand. Where possible, we try to place sprue points in our designs to be in hidden places to avoid the need for cleaning on many parts.

**Priming:** We highly recommend priming with a FLAT enamel spray paint. Rustoleum and Krylon make these types of paint and are what we use in the studio.


**Painting:** Paint with your normal hobby and spray paints to finish your project.

Thank you so much for your purchase and please reach out if you have any questions or run into any issues.

Email us at: [support@deathraydesigns.com](mailto:support@deathraydesigns.com)  
Chat us on Facebook: [FB.com/DeathRayDesigns](https://www.facebook.com/DeathRayDesigns)



1

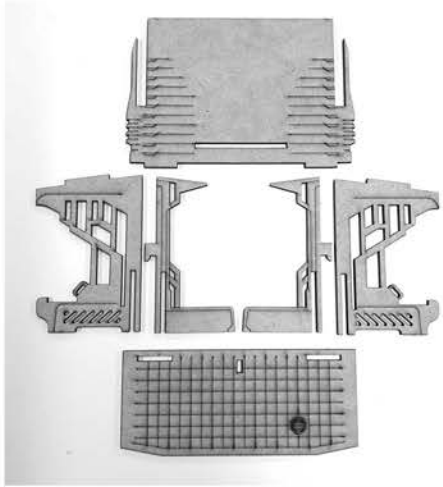


Gather these parts.

2




Glue the back Plate Into the base.

3

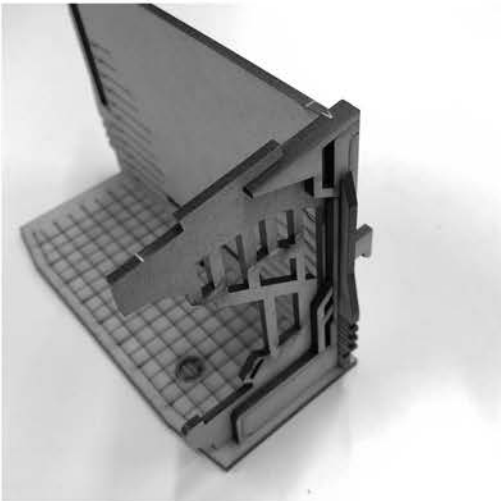


**DRY FIT THIS PART BEFORE GLUING.** On each side you will slot together the two side panels as shown. The large layer with the top tab should be on the inside with the etched detail facing in while the smaller layer should be on the outside with the etching facing out.

4

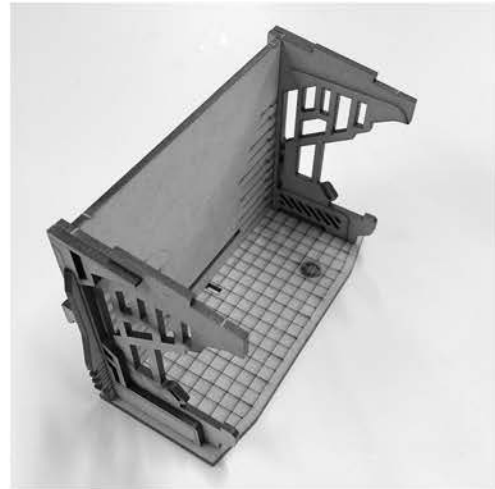


Repeat the previous step on the other side.

5

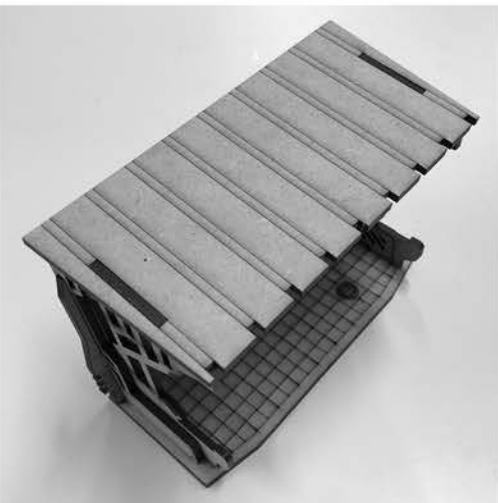

Glue the roof plate on as shown.

6

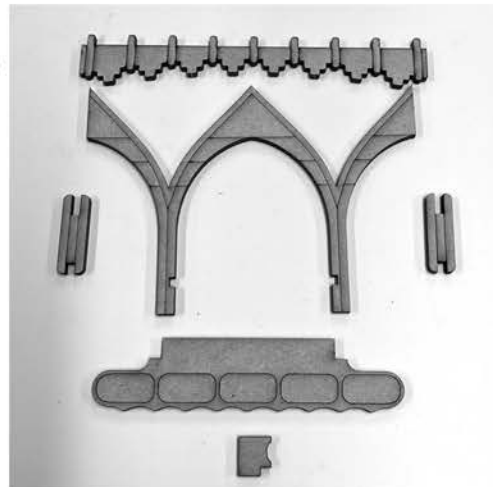

Gather these parts.

7



Glue in the arch detail plate in the back wall as shown.

8




Glue in the support peg in the back center of the floor.

9




Glue the bench into the horizontal slot in the back wall resting on top of the support peg.

10

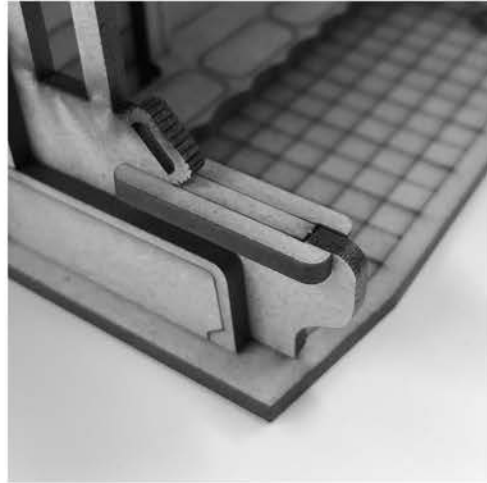

Glue in rail tops on each side.

11

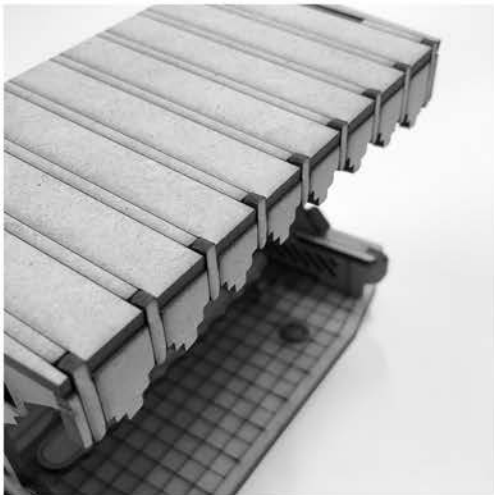

Glue the front flat onto the roof.

12



You're finished!