


IN-City Double Pod assembly

1. After removing all pieces from the sheet with a hobby/utility blade, attach faceplates onto sides with superglue. Make sure to line the plates up before you glue to make sure you have the correct pieces matched up.

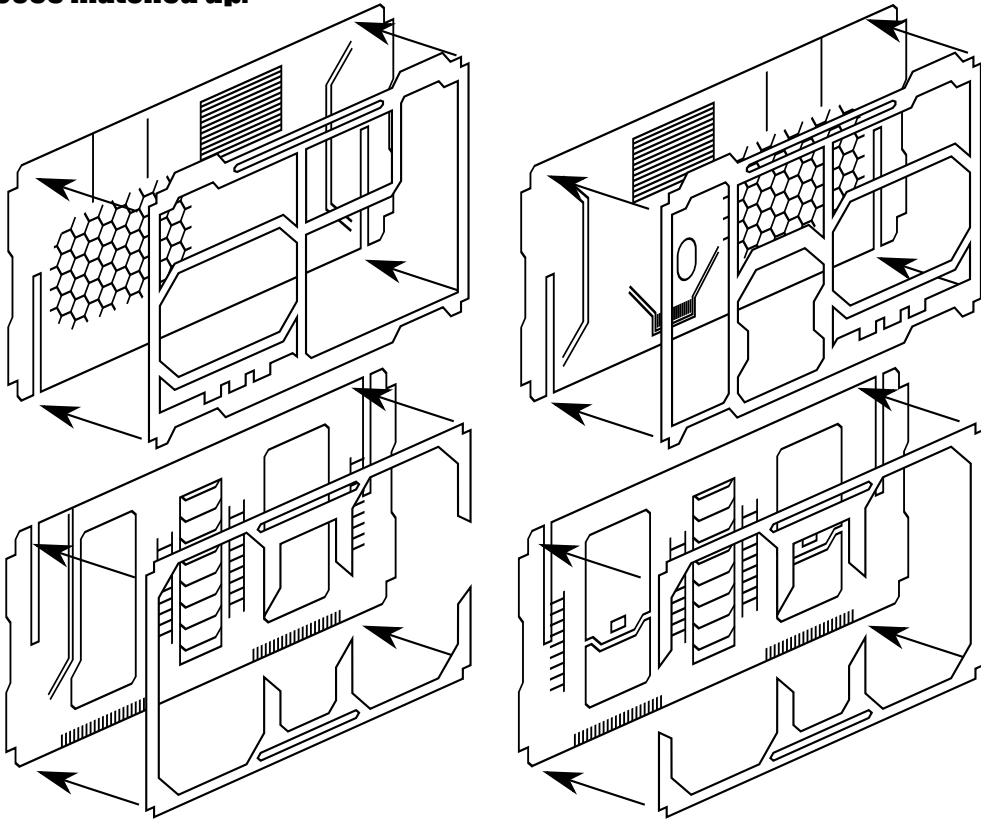

2. Slide faces together at the corners and glue the top and bottom into the interlocking notches.

3. Prime with flat enamel spraypaint best results.

