


RUST POINTE

Brick & Block

- 1. Remove all pieces from the sheet with a hobby/utility blade.**
- 2. Assemble as shown in the diagrams below.**
- 3. Prime with flat enamel spraypaint for best results.**

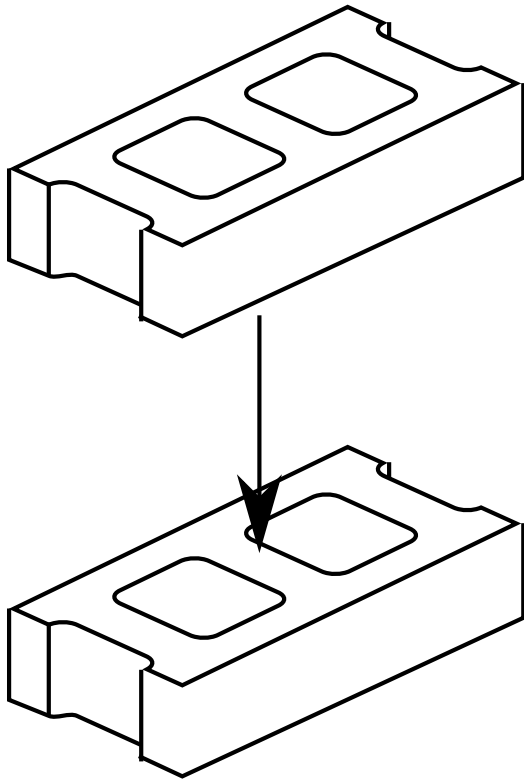

X36



DEATH RAY
DESIGNS