


RUST POINTE Pallets

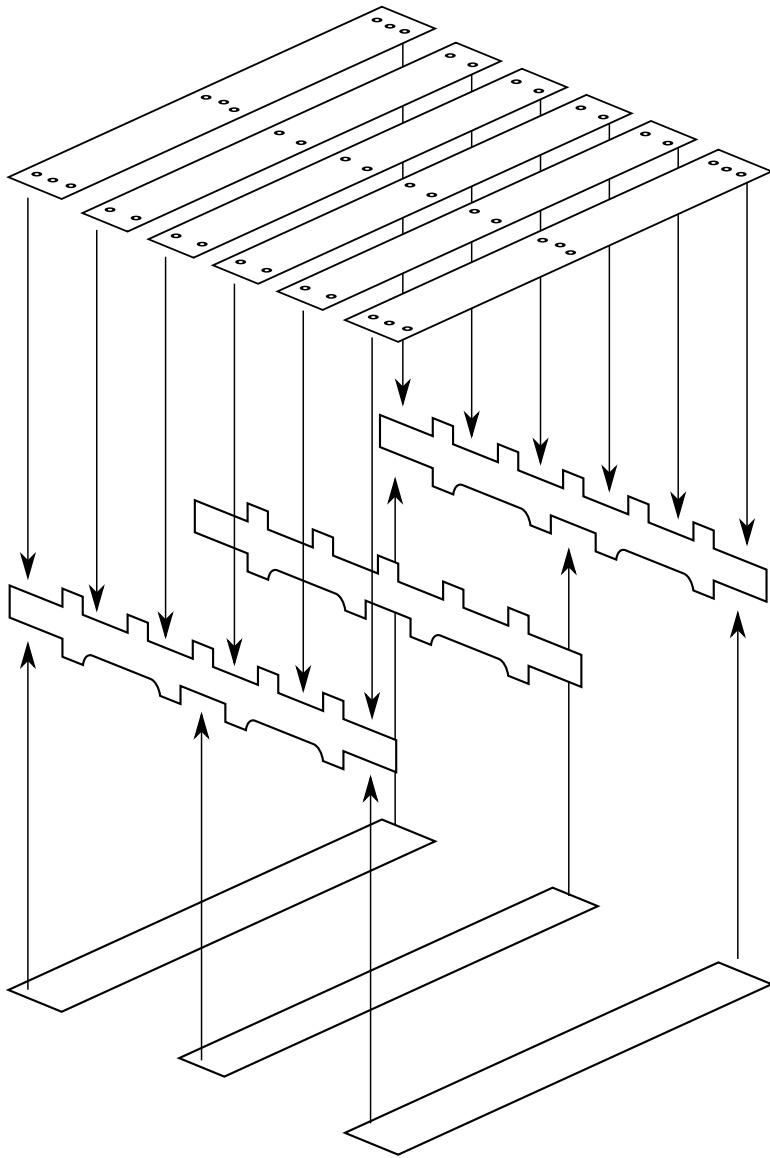

- 1. Remove all pieces from the sheet with a hobby/utility blade.**
- 2. Assemble as shown in the diagrams left and below.**
- 3. Prime with flat enamel spraypaint for best results.**

**This kit includes 2 sizes of planks: Wide (W) and Thin (T).
Wide boards have 3 rows of 3 nails engraved in the top.
Thin boards have 3 rows of 2 nails engraved in the top.**

See the placement chart below for where to put each type.

