

# RUST POINTE


# Tires

**1. Remove all pieces from the sheet with a hobby/utility blade.**

**2. Assemble so that teeth are offset with Superglue or PVA.**


**3. Prime with flat enamel spraypaint for best results.**

**17  
MM**

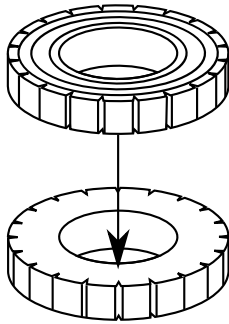


**X4**

**20.6  
MM**

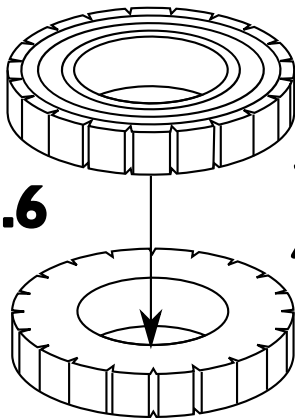

**X5**

**27  
MM**

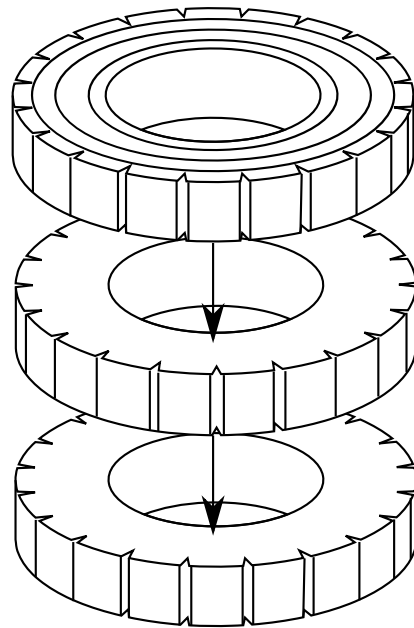

**X3**



DEATH RAY  
**DESIGNS**