123GT
11th Edition

BEFORE YOU BEGIN:

PLEASE READ THROUGH THE INSTRUCTIONS AND INSPECT THE KIT BEFORE YOU GET STARTED.

Tools: You may need basic hobby tools such as a hobby knife, files, and sandpaper as well as glue to complete the assembly process.

Glue: We recommend using both superglue and PVA (white glue). Super glue is necessary for gluing any plastic, acrylic, or resin parts and sets very quickly. PVA gives you more working time if you need it for larger areas or for parts that need extra finesse to get lined up perfectly.

Cleaning Parts: The sprue points where parts were attached to the sheets can be sanded flush or carefully saved with a hobby knife. We do not recommend scaping as you would with plastic or resin models as it tends to make the MDF fray and get fuzzy. Part cleaning with a hobby knife is easiest if done before assembly, but can frequently be done after if you have files and sandpaper on hand. Where possible, we try to place sprue points in our designs to be in hidden places to avoid the need for cleaning on many parts.

Priming: We highly recommend priming with a FLAT enamel spray paint. Rustoleum and Krylon make these types of paint and are what we use in the studio.

Painting: Paint with your normal hobby and spray paints to finish your project.

Thank you so much for your purchase and please reach out if you have any questions or run into any issues.

Email us at: support@deathraydesigns.com
Chat us on Facebook: FB.com/DeathRayDesigns

DEATH RAY DESIGNS .COM

1

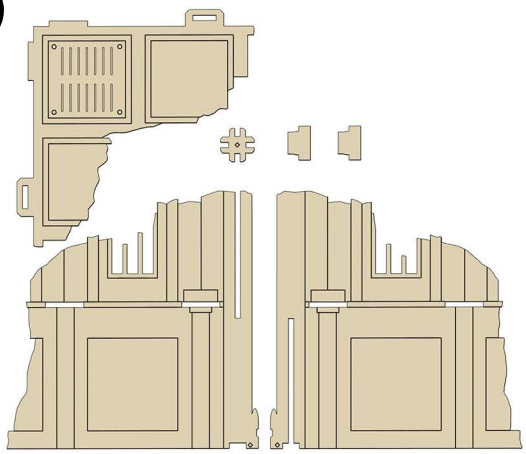

Gather these sheets

2

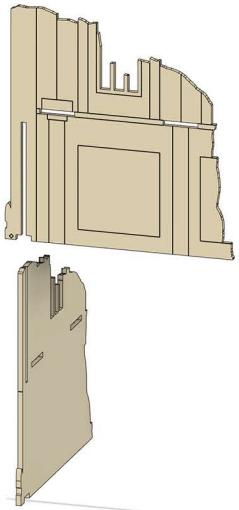

Slot the wall sections together

3

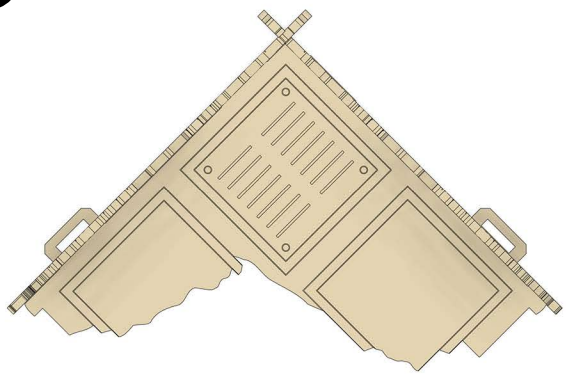

Slot Floor into the slots in the walls. You will need to flex the angle of the walls to get the floor in place.

4

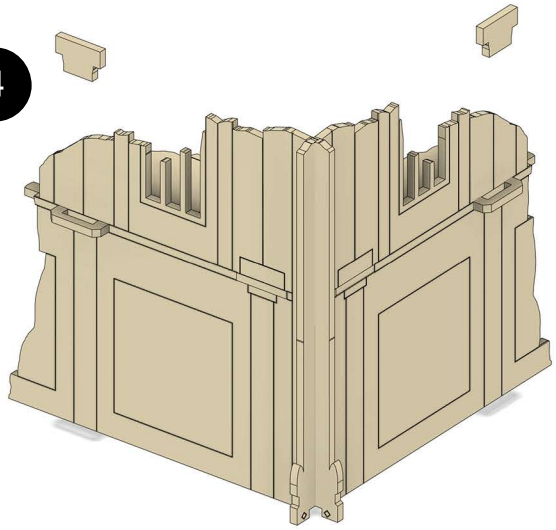

Glue the tabs down into the slots in the floor protruding from the front of the walls now.

5

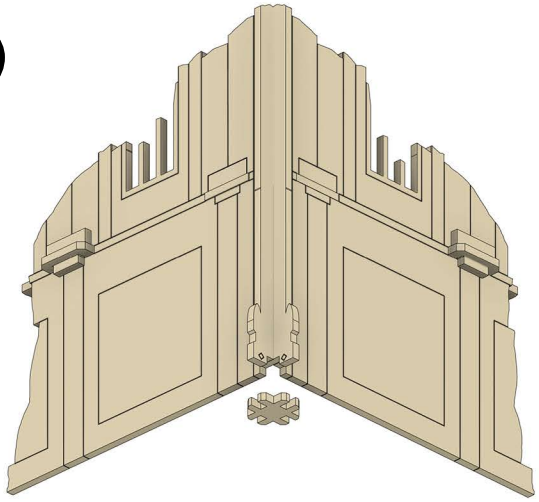

Glue the corner reinforcement from the bottom as shown.

6

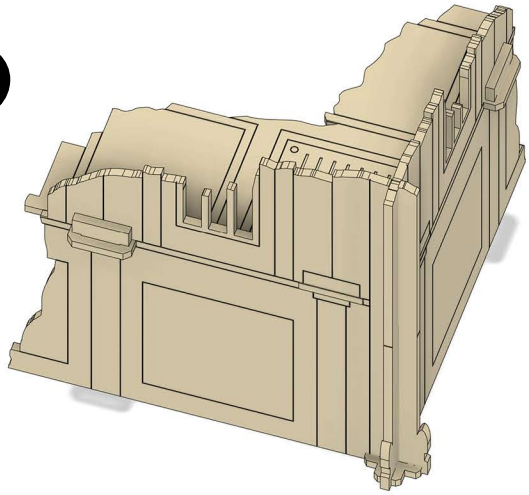

Repeat for all buildings.

Copyright Death Ray Deisgns LLC, 2026 - DeathRayDesigns.com

1

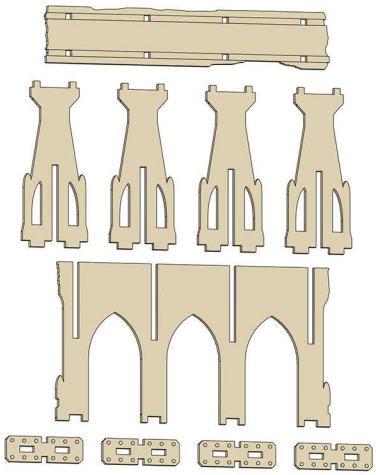

Gather these parts

2

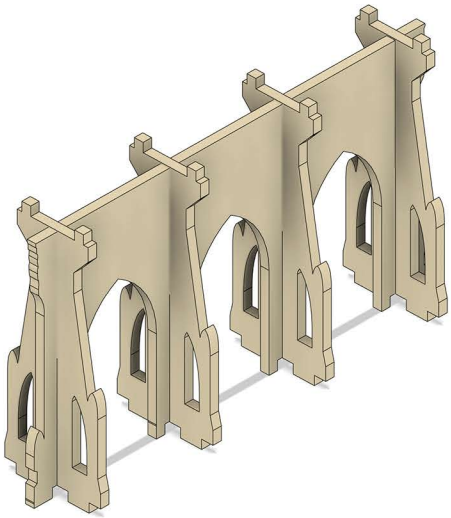

Slot the wall sections together

3

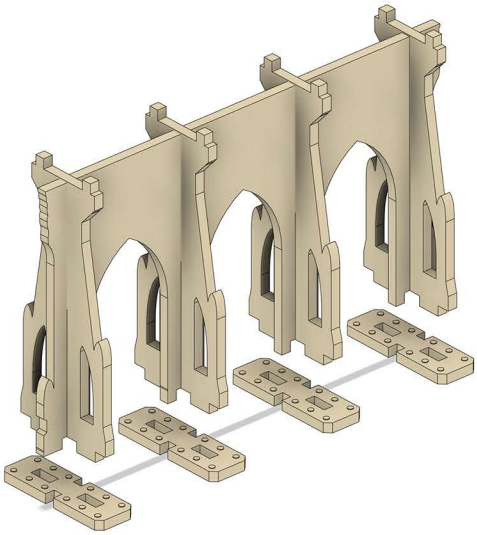

Glue the bases onto the bottoms of the wall sections.

4

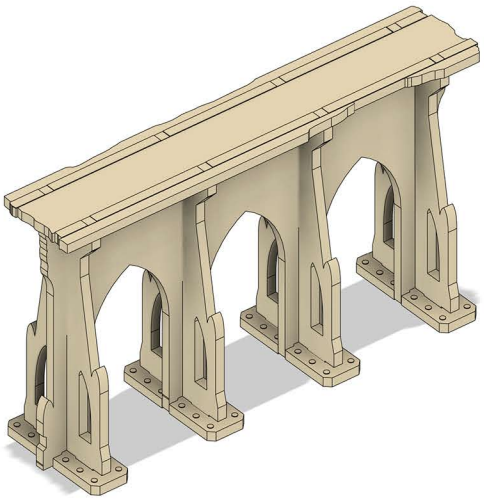

Glue the top on and repeat for the other Viaduct.

Copyright Death Ray Deisgns LLC, 2026 - DeathRayDesigns.com

1

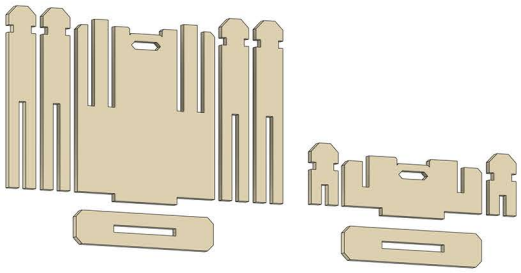

Gather these parts

2

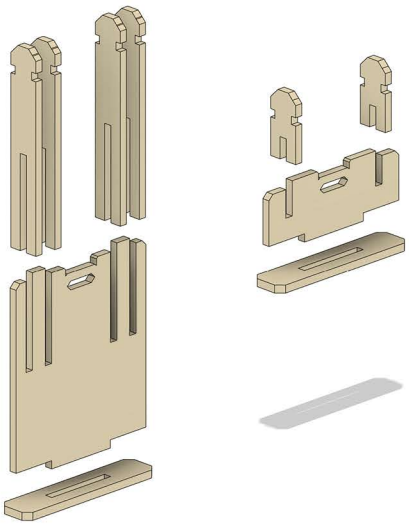

Slot reinforcing bars onto the barricades.

3

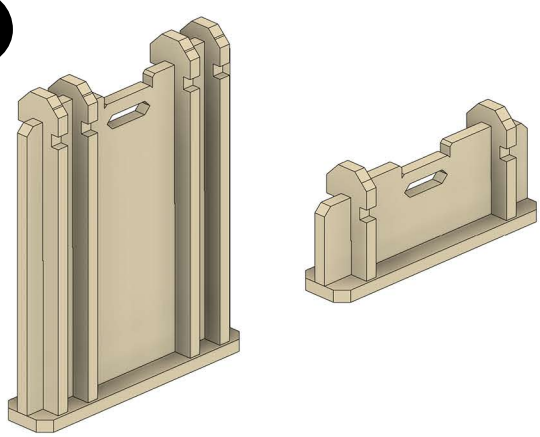

Glue the walls into the bases and repeat for all barricades.

Copyright Death Ray Deisgns LLC, 2026 - DeathRayDesigns.com

1

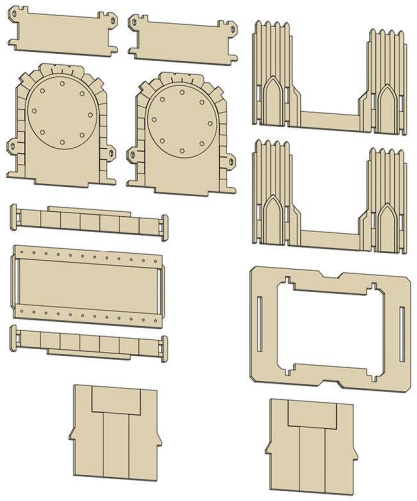

Gather these parts

2

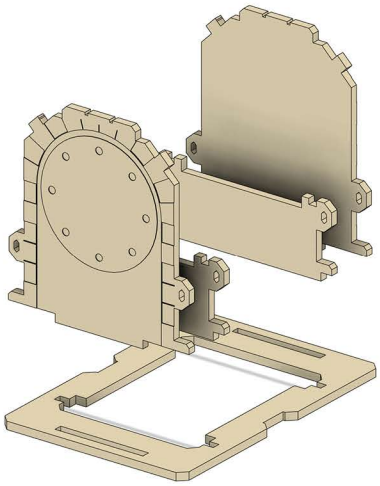

Glue the end walls and center walls to the base.

3

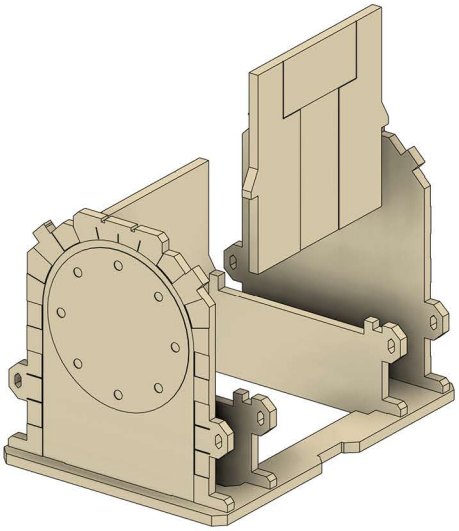

Glue the inner wall slats vertically into the slots in the center walls.

4

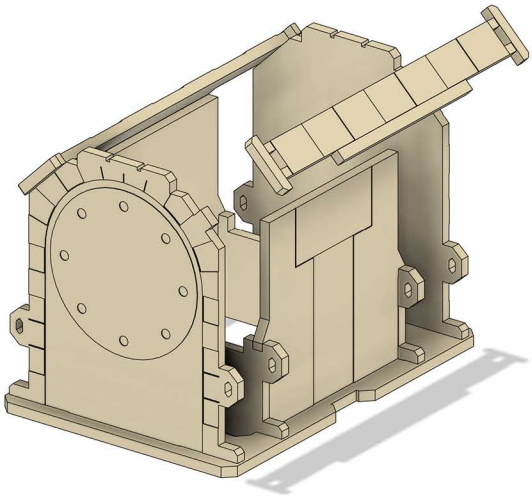

Glue the plates on the upper corners as shown.

5

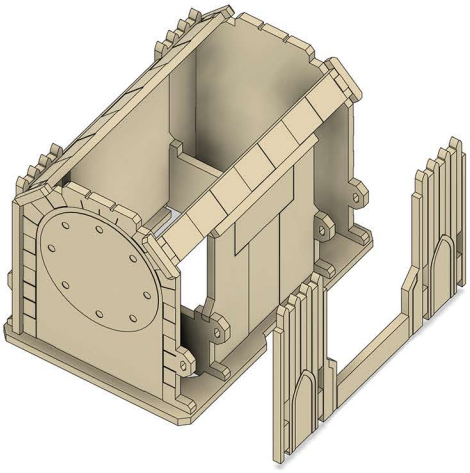

Glue the side walls on as shown.

6

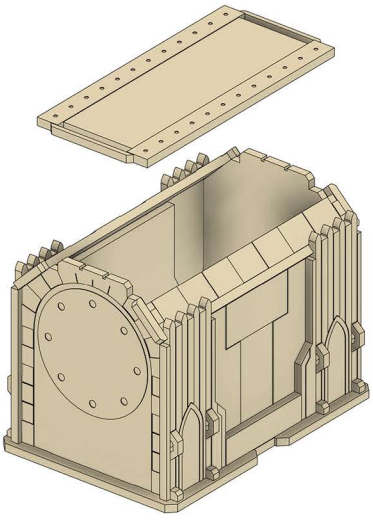

Glue the top on and repeat for the other generator.

Copyright Death Ray Deisgns LLC, 2024 - DeathRayDesigns.com